

Quick Start Guide

FaceKiosk-H13A/C

Version: 2.0

Due to regular upgrades of systems and products, ZKTeco could not guarantee exact consistency between the actual product and the written information in this manual.

1. Device Overview



Floor Mount Facekiosk-H13C



2. Facekiosk Installation

Wall Mount Installation Procedure

Before installation, connect the wire to the device and pass it through the lower aperture of the device.



Align the back plate with respect to the screw holes on the back of the device.



Secure the plate with the screws (11 pcs) to the back of the unit.



3 Place the rear panel at the most appropriate height from the ground. Drill the holes on the wall and fix the rear panel.



4 Set the device in an appropriate position on the rear panel that is fixed on the wall.



5 Secure the Kiosk by assembling the device and the rear panel with the bottom screws.



Floor Mount Installation Procedure

1 Take the device and the base from the box, and insert the device into the corresponding slot of the base plate.



2 Cautiously incline the device in a horizontal position and assemble the device over the base with the screws (8 pcs) from the bottom of the base.



3. Door Sensor, Exit Button & Alarm Connection



4. Access Control Device Connection





Registration



Device Registration:

Tap **Menu** > **Staff Management** > **New Staff** for new user registration. Enter the mandatory registration details (ID, First name, Face registration) and then tap **Next** to select the verification mode (face, fingerprint, access card number (RFID card).





Software Registration :

Senari	Number	Device Name	Device Model	IP Address	Attendance Area	Enable State	Online Status	Register machine	Commands to be executed	Personnel Quantity	Fingerprint Quantity	Face Quan
572919	1300011	5729191300011	1 FaceKiosk-H13	192.168.212.2	5 puck	•	Online	0	0	10000	20	0
			Sea	arch Device								
Total Prog	ress m	10	096	Searc	hed devices cou	int:2 ded:1						
IP Addre	ess	S	Serial Number									
IP Addre	ess	Serial Number	Device Type	Operations								
192.168.	212.236	CEX9191160026		Add								
192.168.	212.25	5729191300011		This device I	has been added							
	Add											
	Device Name* CE		CEX91	91160026								
	Serial Number* C		CEX91	91160026								
	IP Address 192.1			68 . 212 .								
	Attendance Area* Area N			ame 🔲								
	Timetable* (UTC+8		B)Beijing, Cl									
	Enrollm	Enrollment Device										
A The												
		-										

Set the IP address and the cloud service server address on the device before registering into the software.

Biotime Software Registration:

1. If the device is set with server address and port number the device will be automatically added to the software.

2. Click Personnel > Employee > Add to register users.

3. Click **Device** > **Data Transfer** > **Sync Data to Device** to synchronize all data.

ZKBioSecurity Software Registration:

1. Click **Attendance** > **Device** > **Search Device** to add the device to the software.

If the device has set the server address and port, it can be added automatically.

2. Click **Personnel** > **Person** > **New** to register users.

3. Click Attendance > Device > Device control > Synchronize All Data to Devices.

For more details, please refer to the ZKBioSecurity User Manual or BioTime User Manual.

Mobile Phone Registration:

Scan the QR Code using the mobile phone and register the face.



Note: Only the super administrator is entitled to access the main menu of the system.

- a Advised to set up or install the device terminal at the indoors without sunlight interference.
- **b** Recommended recognition distance:



Wall Mount Face Kiosk-H13A

The recommended height of the device camera from the ground is 155cm and the recommended distance from the person to the equipment is 50cm (applicable height range 150cm-180cm). If the height is not within this range, the front and rear positions can be moved accordingly.

Upload Data to the Back-end Software



Main Menu->Communication setting, Communication Settings allows you to upload or transmit user data from devices like computer, laptop and more.

<	Communication Setting	
Will Setting		
Ethernet Setting		
Cloud Server Setting		

Communication Settings

Ethernet setting: Connects the device to the computer via Ethernet. **Cloud server setting:** Connects the device to the server.

U Disk Management



Tap **U Disk Management** on the main menu to manage USB drivers. Insert the USB device into the USB port of the Facekiosk device to upload or download data.

Upload from USB: Uploads User data, Picture advertisements, videos.

Download from USB: Downloads user data attendance photos stranger's photos blacklist photos attendance log.

Note: Please ensure that all documents to be uploaded are under the root directory of the USB drive. The format and size of the images and motion pictures of advertisements are not restricted.

ZKTeco Biometrics India Pvt. Ltd. Global R&D Centre

Survey No 01/01, Outer Ring Road, Mahadevpura,

Bengaluru, Karnataka – 560048

Phone: 080-68281342/48 | Email: sales@zkteco.in | Website: www.zkteco.in

